

Air Leak of Tubeless Tyre




AREA:

BEAD

CONDITION:

Air leakage occurring between tyre bead and rim or in rim.

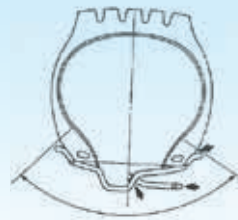

CAUSES:

- Faulty rims (deformed, rusted, cracked, etc.) and tubeless rings.
- Improper mounting of tyres on rims.
- Tyres having bead damage.

RECOMMENDATIONS:

- Use correct rims or tubeless rings without deformation of rim flange, rust, crack etc.
- Mount tyres correctly.
- Use correct tyres without bead damage.

HOW TO CHECK:

Look carefully for air leaks in both tyre and rim assembly by using soapy water.

