Truck Tyre Injury Guidance

Bent Bead (Kinked)







AREA: BEAD

CONDITION: Bead portion is bent partially, not

retaining normal circular shape like a

hoop.



CAUSES:

- Improper storage and/or transportation.
- Mishandling of tools such as hammers and incorrect use of tyre levers or tyre changer in mounting/dismounting.

RECOMMENDATIONS:

- Transport tyres properly.
- Stock tyres properly in accordance with the recommended procedures.
- Mount/dismount tyres carefully and properly in accordance with the mounting/dismounting procedures.

HOW TO CHECK:

Observe the bead portion visually.

