
Truck Tyre Injury Guidance

Abnormal Wear - Heel & Toe Wear

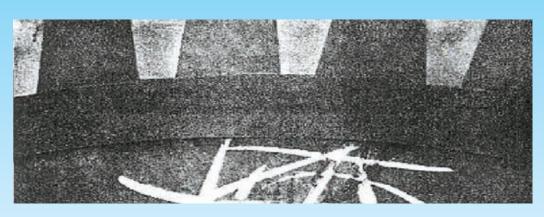



AREA: TREAD

CONDITION: One side of the blocks and/or lugs on

the tread wearing faster than other side circumferentially like saw teeth.



CAUSES:

- Under inflation and/or overload.
- Tyres have not been rotated at a timely interval.
- Sudden braking and rapid acceleration.

RECOMMENDATIONS:

- To use and maintain tyres at the correct air pressure for the axle loads imposed.
- Rotate tyres timely in accordance with recommended rotations to avoid heel & toe wear, taking into account change of rotational directions.
- Avoid rough driving.

HOW TO CHECK:

Inspect the tread visually.

